

SIP NETWORK SPEAKER PORT SETTING

1. Create a username and password for the SIP speaker on the SIP server. (each SIP speaker must have unique username):

eg: Sip name: sip88

Sip password:sip123

2. Check the information of the SIP sever:

eg: IP address(eg: 192.168.0.119)

No. of the SIP port:5060

3. set up port tool:parrot-man-setup-2.4.0805-sip



parrot-man-setup-2.4.0805-sip

4. Open the SIP Inspector



5. Click 《 / Click EN chang language to English



6. Search for SIP speakers and modify SIP information.

AoIP device managerv2.4.0805									
1. Play sound Play local music Apply config Revert change Reboot device Update device									
all devices Speakers Mic Console /touch Mic Console /keyboard Capturers TTS devices									
Row num	Dev code	HW addr	Proto	Address	Netmask	Gateway	Dev name		
1	961D6710	00:A0:96:1D:67:10	static	192.168.0.103	255.255.255.0	192.168.0.1	(empty)	A	

2.
 Fill with the SIP speaker
 IP address (eg:192.168.0.103)
 Netmask (eg:255.255.255.0)
 Gateway (eg:192.168.0.1)

AoIP device managerv2.4.0805									
Play sound Play local music Apply config Revert change Reboot device Update device									
all devices Speakers Mic Console /touch Mic Console /keyboard Capturers TTS devices Call									
APN	Dev name2	Sip ip	Sip port	Sip name	Sip password	Sip status	Version	Viper version	
(empty)	(empty)	192.168.0.119	5060	sip88	sip123	offline	2.4.0924	2.4.1127	

3.
 Fill with the SIP sever address:192.168.0.119
 Fill with SIP port No.:5060
 Fill with SIP name:sip88
 Fill with SIP password:sip123